 


EUREKA

Hand Held Vacuum Cleaner Household Type Owner's Guide 50 Series

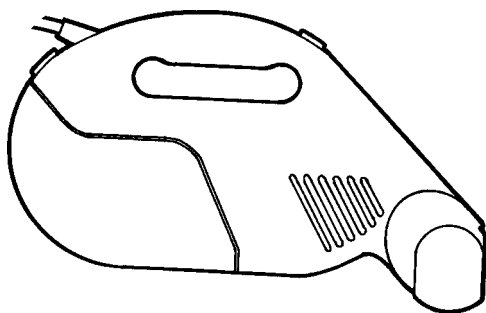

Index

Important Safeguards	2
Service Information	4
Use	5
Accessories	6
Dust Cap	7
Motor Filter	7
Brush Roll and Belt	8
Order Form	9
Warranty	11

For location of nearest
Eureka Warranty Station
or Service Information call
1-800-282-2886*.

*En Mexico llame al 5670-6169

www.eureka.com

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock or injury:

- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brush roll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without motor filter in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS

CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.

AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique, ou de blessure:

- N'utiliser à l'extérieur où sur une surface mouillée.
- **Ne quitté pas l'aspirateur lorsqu'il est branché. Fermer le poste et débrancher la corde électrique lorsqu'il n'est pas en marche et/ou avant de le réparer.**
- N'utilisez pas comme un jouet. Portez attention l'orsque vous l'utilisez pies où par un enfant.
- Utilisez seulement comme décrit dans ce livet. Utilisez seulement les accessoires recommandés par le fabricant.
- N'utilisez pas avec une corde où prise endommagée. Si l'aspirateur ne fonctionne pas comme il le faut, s'y il a été échappé, endommagé, laissé à l'extérieur, où échappé dans l'eau, retourné l'aspirateur à un centre de réparation avant de s'en servir.
- Ne tirez pas et ne portez pas par le corde, utilisez la corde comme une poignée, fermez un porte sur la corde, où tirez la corde autour des coins aign. Ne passez pas l'aspirateur sur la corde. Eloignez la corde des surfaces chaudes.
- N'utilisez pas la corde électrique où la prise de courant avec insuffisamment de capacité de courant.
- Fermez tout les contrôle avant de débrancher.
- Ne touchez pas la prise où l'aspirateur avec les mains mouillées.
- Ne mettez aucun objets dans les ouvertures. N'utilisez pas avec des ouvertures bouchés; gardez libre de poussière, tissu ouaté, cheveux et n'importe quoi qui peut réduire la courant atmosphérique.
- Cet aspirateur crée de la succion et contient un rouleau-brosse tournant. Tenir les parties mobiles et les ouvertures loin des cheveux, des habits, des doigts et de toute partie du corps.
- Ne ramassez rien qui brûle où fument, tel que cigarettes, allumettes, où des cendres chaudes.
- N'utilisez pas sans le sac de poussière et filtre(s) en place.
- Utilisez des précautions lorsque vous nettoyé sur des escaliers.
- N'utilisez pas pour ramasser des liquides inflammable où combustible, tel que de l'essence, où utilisé dans les endroits où ses derniers peuvent être présent.
- Entreposez votre aspirateur à l'intérieur dans un endroit propre et sec.
- Garder votre lieu de travail bun éclairé.
- Débrancher les appareils électrique avant de les balayer.

CONSERVEZ CES INSTRUCTIONS

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Afin de réduire le risque de choc électrique, cet appareil est muni d'une fiche polarisée (une des lames est plus large). Cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne peut être insérée dans la prise, retourner la fiche. Si la fiche ne peut toujours pas être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié. Ne pas modifier la fiche.

GENERAL INFORMATION

The cleaner is designed to pick up dirt and dust particles. Avoid picking up hard or sharp objects that could damage the vacuum cleaner.

Service Information

The instructions in this booklet serve as a guide to routine maintenance. For additional service information telephone our toll free number for the nearest Eureka Authorized Warranty Station. **You should know the model, type and serial numbers when you call:**

USA: 1-800-282-2886
México: 5670-6169
Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. Refer to The Eureka Limited Warranty for complete service information.



DO NOT OIL the motor or the brush roll at any time. The bearings are permanently lubricated and sealed.

Rating Plate

The rating plate on the back of the cleaner shows the model number. For prompt and complete service information, always refer to these numbers.

Model & Type_____

Serial No._____

THE EUREKA COMPANY
BLOOMINGTON, ILLINOIS 61701 USA
HOUSEHOLD TYPE

 
MODEL

HOW TO USE

The lightweight vacuum cleaner is designed to be used for quick, convenient, and easy cleanups. Moving the nozzle over carpeting, rugs, or upholstery provides suction and bristle agitation to clean dirt, lint, and threads from surfaces. The convenient Riser Visor-nozzle cover rotates upward to clean floors or downward to clean stair risers or furniture backs.


Power Switch

The power switch is located on the top of the handle. Slide the switch forward to turn the motor ON; slide back to turn the motor OFF.

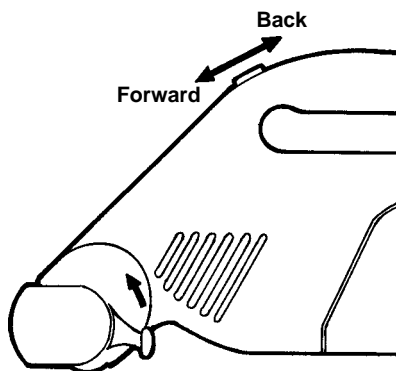

Riser Visor- Nozzle Cover

 The Riser Visor nozzle features a rotating cover over the brush roll. When the cover is in the normal position, the brush roll action is toward the bottom side of the nozzle to clean flat areas such as stair steps or upholstery. Pull back on the release lever and pull upward to rotate the cover downward and expose the brush roll to the front of the nozzle for cleaning stair risers or furniture backs.

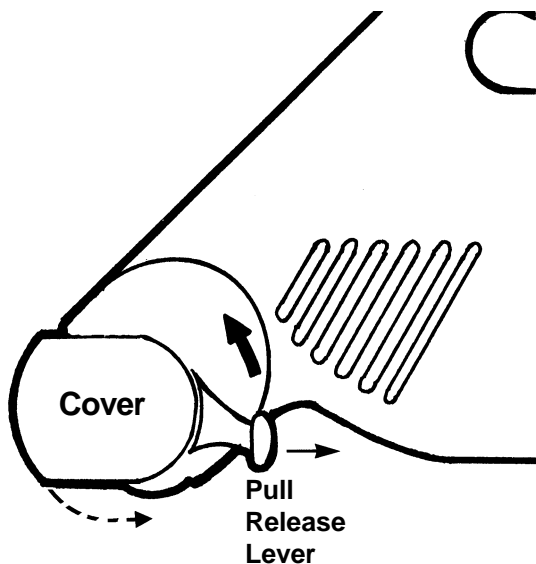

Caution: To prevent injury, turn off the switch before rotating the Riser Visor nozzle cover.

Cord Storage

 
Wind the cord loosely around the vacuum cleaner unit for storage. Fasten the plug to the cord to prevent unwinding.

Cleaner Accessories (optional)

Some models feature one or both of the accessory sets shown below as standard equipment. Additional accessories may be purchased from a local dealer or from The Eureka Company.


Adapter and Hose

Place the Riser Visor-™ nozzle cover to the front. Then hold the adapter next to the underneath side of the brush roll with the hose pointing up. Secure the tabs on the lower edge of the adapter into the opening. Push down on the knob to release the upper tabs and snap the adapter securely against the unit.

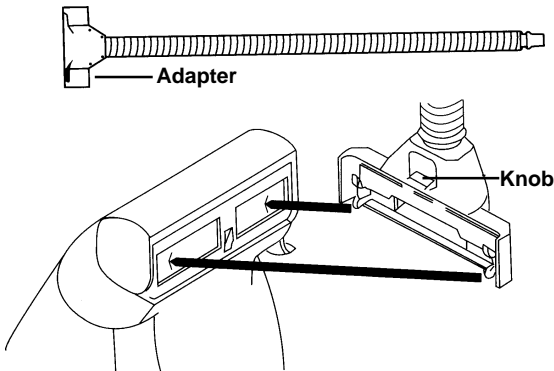

Tools

 The cleaning tools are two different sizes. The regular size tools are for general household cleaning while the Micro Tool Set is ideal for cleaning typewriters, copiers, or keyboards.




Dusting brush for furniture, blinds, books, lamp shades, shelves.




Crevice tool for corners, baseboards, sliding door tracks.

Micro Tool Set

 
The Micro Tool Set contains a variety of micro sized tools (see below). Fit the micro adapter over the end of the hose. Then add the clear flexible tube and the tool coupling. Place the tools on the end of the tool coupling or a wand.

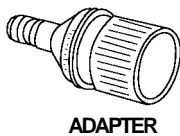

ADAPTER

 


STRAIGHT
EXTENSION WAND

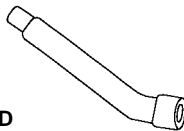 

CURVED
EXTENSION WAND



 
OVAL BRUSH

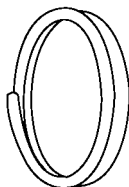


CLEAR FLEXIBLE
TUBING 36"



 TOOL COUPLING



ROUND BRUSH

 

CREVICE TOOL

HOW TO MAINTAIN

The instructions given in this booklet serve as a guide to routine maintenance. Keep the vacuum cleaner at top operating efficiency. Clean the filter and empty the dust container regularly. If the dust container is visibly full before finished cleaning, empty as needed.

Dust Container and Motor Filter

 
Empty the dust container and clean the motor filter regularly to keep the vacuum cleaner operating efficiently. Make sure the filter is securely attached in place before vacuuming. Failure to replace the filter will allow dust to enter the motor section which will damage the vacuum cleaner. Some fine particles can restrict airflow very quickly and will decrease performance even before the dust container appears full. For that reason, when vacuuming carpet fresheners or cleaners, powder, plaster dust, or similar fine substances, the dust container and filter may need cleaning more often.

NOTE: Turn off the switch and unplug the electrical cord before emptying the dust container and cleaning the motor filter.

Press the dust container latch, located below the electrical cord, and rotate the dust container off the unit. Grasp the motor filter and pull up to remove.

Shake dust container contents into a suitable container. Brush dust and dirt from motor filter. If further cleaning is desired, hand launder the washable motor filter in warm water using a mild detergent. Air dry thoroughly before returning it to the dust container.

Replace motor filter into top of dust container so rim of filter is seated completely inside the container. Place the dust container tab into the slot in the unit. Pivot the sections together until the dust container latch locks the container in place.

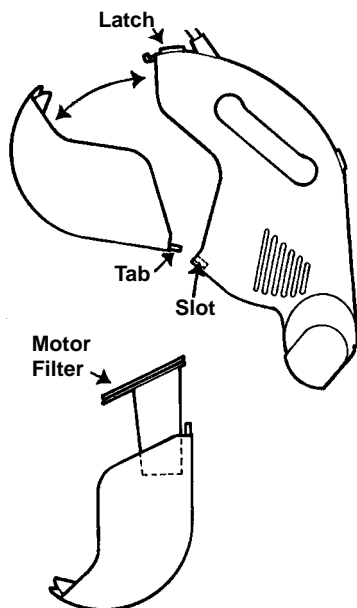

A damaged or extremely soiled motor filter should be replaced. Pull back on the rubber gasket to remove the used motor filter from the filter support frame. Keep the frame and discard the used motor filter. Put the new filter over the frame and secure the lip of the frame into the rubber gasket. Additional filters are available from The Eureka Company, Bloomington, Illinois 61701 .

Order GENUINE EUREKA motor filter part no. 53820.

Brush Roll

The rotating brush roll sweeps and combs the carpet nap. Keep the brush roll free from hair and threads so it will continue to be effective.

NOTE: Turn off the switch and unplug the electrical cord before cleaning the brush roll.

Brush Roll Belt

The brush roll belt drives the brush to agitate, sweep, and comb the carpet nap. Even though the belt may not need to be changed often, it should be checked regularly to be sure it is in good condition. Replace the belt if it is stretching, cracking, or slipping. Cut away any hair or thread wound around the brush roll or the belt pulley because the buildup could cause the belt to rotate unevenly.

NOTE: Turn off the switch and unplug the electrical cord before replacing belt. Belt pulleys can become hot during normal use. To prevent injury, avoid touching the belt pulley when servicing the drive belt.

 
Pull back on the release lever and gently pry the nozzle cover from both sides of the housing.

Place vacuum cleaner so nozzle opening is in view. Loosen the screw and pry off the belt view cover **to remove belt from motor pulley**. Rotate the brush roll guard down and off the housing. Lift out brush roll.

Place belt around brush roll. Hold the brush roll so the shortest section is on the right side and the flat sides of the end caps are aligned with slots in the nozzle. Push brush roll into cleaner. **Place lower side of belt around left side of motor pulley** and rotate into position.

Place hook on lower side of brush roll guard into the knob on lower side of nozzle. Rotate guard upward to position. Hold belt view cover to top of the opening and slide cover down into place. Snap corners into position and secure with screw.

Replace brush roll nozzle cover so the release tab is on the right side of the cleaner.

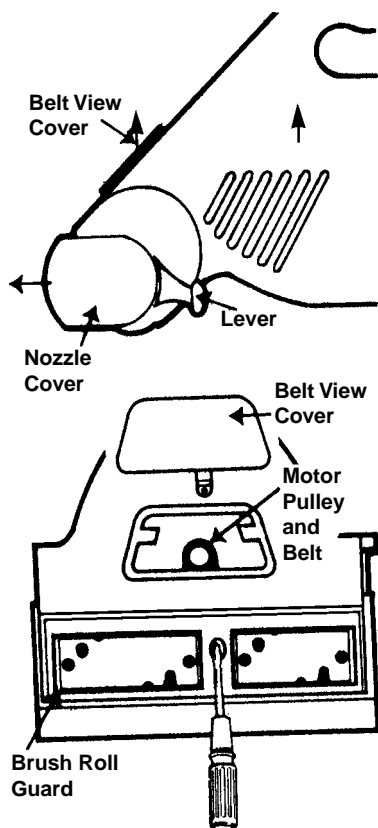

Ask for GENUINE EUREKA replacement belt, No. 53819.

S O L D T O

Name		
Address (street address needed for UPS)		
City	State	Zip
Telephone (Day)	(Eve)	(Fax)

S H I P T O

Name		
Address (street address needed for UPS)		
City	State	Zip
Telephone (Day)	(Eve)	(Fax)

To Order



By Phone

1-800-438-7352*

HOURS:

Call between 8 a.m.
and 4:45 p.m.
central standard time
Monday through Friday.

By FAX

1-309-823-5789

*En Mexico
Llame 5670-6169

By Mail



Simply fill out this
Order Form.
Please be sure to
include day
and evening
phone numbers.

www.eureka.com

70320

Model Number _____

Type _____

Serial Number _____

IMPORTANT:

Be sure to include
your model, type, and
serial numbers. These
numbers may be
found on the rating
plate.

Genuine Eureka Parts



Filter

Filter Support



Brush Roll

Belt - pkg of 2

Part No.	Qty.	Price (USD)	Total
53820		3.29	
14329-1		2.29	
53815		20.79	
53819		2.49	
Total (prices subject to change without notice)			
Tax (add state and local taxes as required by law)			
Postage and Handling Charge (Within the U.S.A.)			\$3.75
TOTAL			

To Answer Problems or Questions for U.S.A. and Canada call:

1-800-282-2886*

7 a.m. to 8 p.m. central standard time Monday through Saturday

Method of Payment (No C.O.D.s)

☐ Check or money order (payable to The Eureka Company). Do not send currency.

☐ Charge to my ☐ Visa (13/16 digits) ☐ MasterCard (13 digits) ☐ American Express (15 digits)

Acct. number

Expiration date

Signature (Full name as shown on account) _____

THE EUREKA LIMITED WARRANTY

What This Warranty Covers

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

What This Warranty Does Not Cover

- Parts of the cleaner that require replacement under normal use, such as disposable dust bags, filters, drive belts, light bulbs, and brush roll bristles
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

What The Eureka Company Will Do

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

Warranty Registration

Please fill out and return the warranty registration card accompanying your cleaner.

Obtaining Warranty Service

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station. You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners—Service and Repair." Be certain that the Warranty Station is "Eureka Authorized." For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

USA: 1-800-282-2886

Mexico: 5670-6169

Canada: 1-800-282-2886

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7.

If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station. Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial numbers from the data plate on the cleaner.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.



Questions & Answers about Genuine Eureka Products

Q: Why should I use only Genuine Eureka paper bags, belts, and parts in my Eureka vacuum cleaner?

A: Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

Q: How can I be sure I am using only genuine Eureka products in my vacuum cleaner?

A: Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

Q: Are there any differences between "made to fit" or "imitation" and Genuine Eureka paper bags, belts, and parts?

A: Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

For Genuine Eureka Value, Accept No Imitations!
THE EUREKA COMPANY

Household Warranty
abs 190